
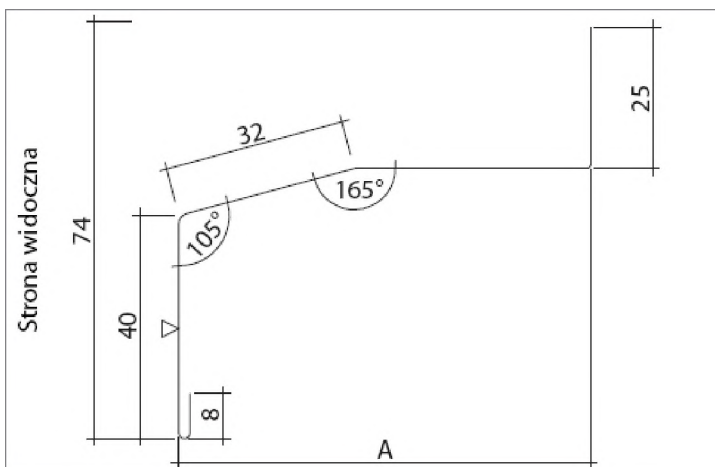


## 1.8. OBR 100

### Okapnik zwykły

| Oznaczenie  | A [mm] | Rozwinięcie [mm] |
|-------------|--------|------------------|
| OBR 100/40  | 53     | 127              |
| OBR 100/50  | 63     | 137              |
| OBR 100/60  | 73     | 147              |
| OBR 100/75  | 88     | 162              |
| OBR 100/80  | 93     | 167              |
| OBR 100/100 | 113    | 187              |
| OBR 100/120 | 133    | 207              |
| OBR 100/125 | 138    | 212              |
| OBR 100/130 | 143    | 217              |
| OBR 100/140 | 153    | 227              |
| OBR 100/150 | 163    | 237              |
| OBR 100/160 | 173    | 247              |
| OBR 100/175 | 188    | 262              |
| OBR 100/180 | 193    | 267              |
| OBR 100/200 | 213    | 287              |
| OBR 100/230 | 243    | 317              |

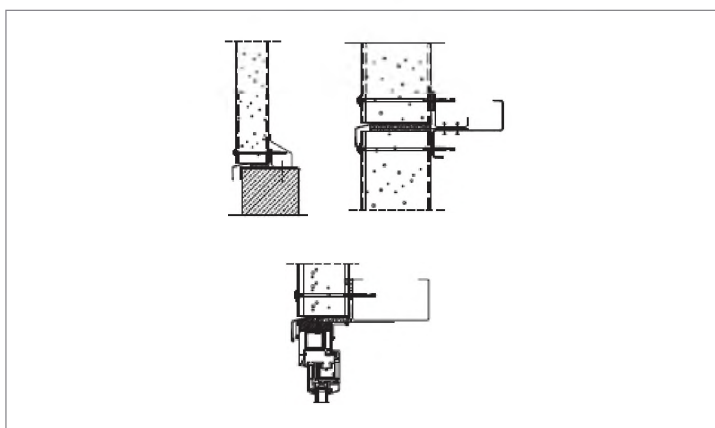

## 1.12. OBR 104

### Listwa wewnętrzna



| Oznaczenie | A [mm] | Rozwinięcie [mm] |
|------------|--------|------------------|
| OBR 104/1  | 40     | 96               |
| OBR 104/2  | 70     | 156              |

Kąt „B” dobierany w zależności od spadku dachu

Uwaga:

OBR 104/1 dla narożnika rozwartego stosowana do kąta od 0° do 6°

OBR 104/2 dla narożnika rozwartego stosowana do kąta od 0° do 22°

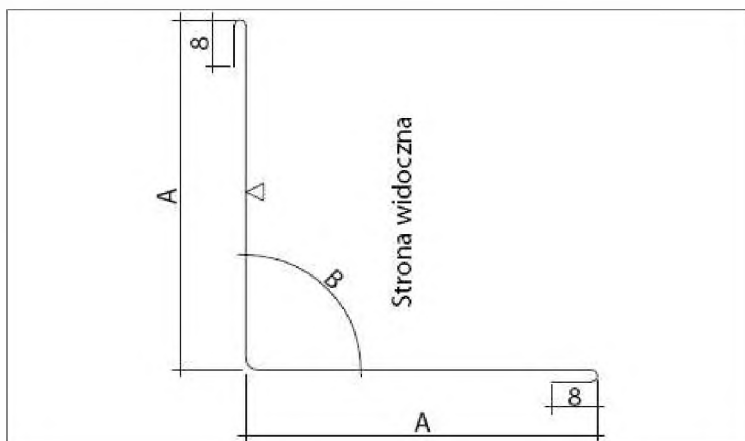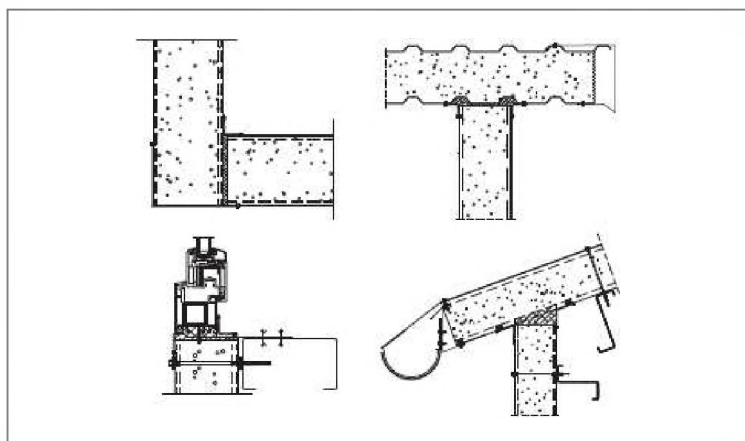

1.15. OBR 107  
Okapnik nadokienny

| Oznaczenie | Rozwinięcie<br>[mm] |
|------------|---------------------|
| OBR 107    | 135                 |

